



INSTRUCTIONAL MANUAL



Model 67300 Nut Buddy

Manual Heavy Duty Lug Loosener

2347 Circuit Way, Brooksville, Florida, USA 34604
Phone: (+1) 352-799-1111 Toll Phone: (+1) 877-775-4AME (4263)
Fax: (+1) 352-799-1112 E-mail: sales@ameintl.net www.ameintl.net



INSTRUCTIONAL MANUAL

COMPONENTS

1:1 Connection Rod



Sockets

1-5/16" (33mm) & 1-1/2" (38MM)




58:1 Assembly



Handle

PARTS BREAKDOWN

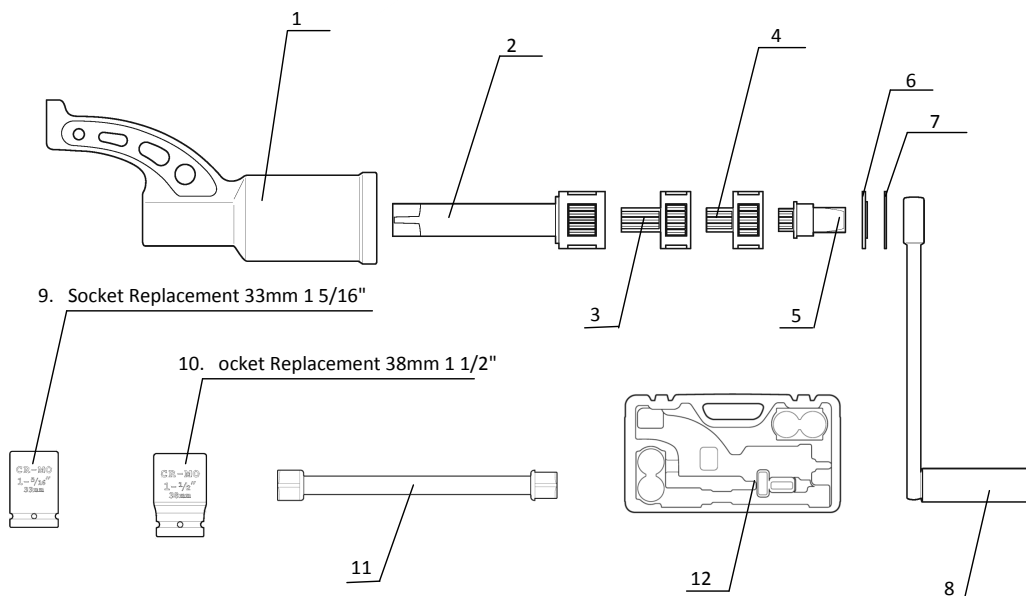

Item No.	Part No.	Description
1	67300-001	Cylinder Body
2	67300-002	Output Assembly
3	67300-003	Third Stage Input Shaft
4	67300-008	Second Stage Input Shaft
5	67300-009	Input Shaft
6	67300-006	Baffle
7	67300-007	Exterior Clip
* 8	67300-004	Handle
* 9	67300-033	Socket Replacement, Nut Buddy, 33mm 1 5/16"
* 10	67300-038	Socket Replacement, Nut Buddy, 38mm 1 1/2"
11	67300-011	Handle Extension
* 12	67300-005	Nut Buddy Case

* Replaceable Parts Only



INSTRUCTIONAL MANUAL

Nut Buddy Tool Set



Instructions for Nut/Bolt Disassembly

Step 1: Fix the suitable **socket** to the front square drive on the **58:1 Assembly** and affix the **handle** to the square drive on the back of the **58:1 Assembly**.



Step 2: Fix the **socket** over the nut/bolt and loosen the nut/bolt one or two rotations until it moves freely. Do not exceed more the 45lbs/25kg of force or damage to the threads, bolt, or nut may result.

Step 3: Use the socket and handle with the **1:1 Connection Rod** to remove the loosened nut or bolt.



INSTRUCTIONAL MANUAL



2347 Circuit Way, Brooksville, Florida, USA 34604
Phone: (+1) 352-799-1111 Toll Phone: (+1) 877-775-4AME (4263)
Fax: (+1) 352-799-1112 E-mail: sales@ameintl.net www.ameintl.net